



Carbon Dioxide Transmitter

issue date: 12.Jul.2021, document no: SCD-D.DS_v41

Features

- Maintenance free NDIR sensor
- Temperature and Humidity options
- Estimated operating life 15 years
- ABC - Automatic Baseline Calculation
- CO₂ ranges, field selectable: 400-2.000 ppm, 0-2k ppm, 0-5k ppm, 0-10k ppm
- CO₂ output signal 4-20 mA and 0...10 Vdc
- Operating voltage 24V AC/DC

Options

- Display, custom design
- Modbus RTU, RS485 protocol
- Relay, 1 or 2 relays, can be set individually
- Buzzer, can be set individually
- PID, RTC and Datalogger advanced options for special applications


Applications

- Indoor ventilation control
- Green houses, poultry
- CO₂ monitoring at cinema/theatre halls, exhibition halls, restaurants, canteens, shopping malls and conference rooms etc

Ordering Codes

model	mounting type	output 1 - CO2	output 2 - CO2	options	advanced options
SCD	D duct	0 no output 1 0...10 Vdc 2 2...10 Vdc 3 0...5 Vdc 4 1...5 Vdc 5 4...20 mA	0 no output 1 0...10 Vdc 2 2...10 Vdc 3 0...5 Vdc 4 1...5 Vdc 5 4...20 mA	M modbus D display R relay 1x RR relay 2x B buzzer	P PID out T RTC L Datalogger

sample order code: SCD.D51 .MD

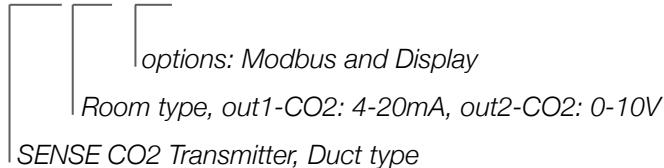
options: Modbus and Display
Room type, out1-CO2: 4-20mA, out2-CO2: 0-10V
SENSE CO2 Transmitter, Duct type

1. WALL and ROOM types are available, please check own datasheets
2. Relay and Buzzer options should have be ordered with Display option
3. For advanced options and special applications, please contact with us info@senseandcontrol.com

General Notes

1. High density of some other gasses may effect the measurements.
2. Observe maximum permissible cable lengths.
3. If cable runs parallel to the mains cable: Use shielded cables.
4. Test only with certified calibration gasses.
5. The cable entry always should have to be pointing downwards.
6. The data indicated under 'Technical Data' apply only to vertically mounted transmitters.
7. Wall/Room type transmitters should have to be mounted in the center of wall but not near to any doors and windows.


DIP Switch Settings

1. Please check if there is any special instruction on the enclosure or inside the cover

DIP	CO2 Ranges	DIP	Temp. Range	Response
	400-2.000 ppm		0...50°C	60 sec.
	0-2.000 ppm		0...50°C	20 sec.
	0-5.000 ppm		-30...+70°C	60 sec.
	0-10.000 ppm		-30...+70°C	20 sec.

Electrical Connections


1. Please be sure about current direction for current outputs and polarity for voltage outputs.
2. Relay contact is Normally Open and rating is max. 1A at 230VAC
3. We kindly advise using 24V for avoiding high voltage harmonics and external power relay for bigger loads
4. Please use shielded and twisted paired cables for Modbus connections
5. Please observe RS485 termination rules, max. 32 devices in a single Modbus line is advised

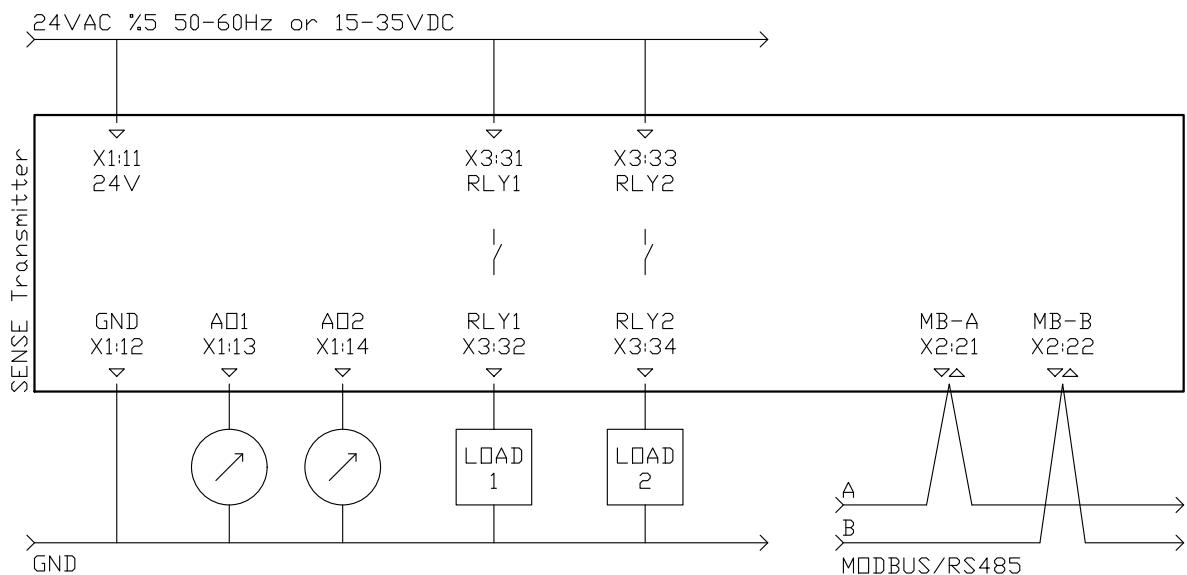

Technical Data

Electrical	Power Supply	AC 24V ($\pm 5\%$), 50-60 Hz DC 15...35 V
	Power Consumption	< 2.5 W
Outputs	Current Output	4...20 mA, maximum 500 Ω
	Voltage Output	0...10 Vdc, minimum 1.000 Ω
	Relay Output	0...5 Vdc, minimum 1.000 Ω max. rating 1A @ 220 Vac
Accuracy	CO2	70ppm + 3% reading
CO2 Sensor	t90	< 120 sec.
	life time	> 15 years expected
	resolution	1 ppm
	ABC period	8 days
	Operating Temperature	0 ...+50°C
	Operating Humidity	0...85 %rH
	Operating Pressure	800...1.200 mbar
General Data	Sensing Element	NDIR
	Media	Air or non-aggressive gasses
	Storage Temperature	-20 ...+50°C
Ranges	CO2	400...2.000 ppm, 0...2.000 ppm 0...5.000 ppm, 0...10.000 ppm
	Temperature	0...50 °C or -30...+70 °C
	Humidity	0...100 %rH
Connections	X1-X2 Terminals	Pluggable screw terminal
	X3 Terminals	Fixed screw terminal
	Cable	maximum 1.5mm2
Protection	SCD.D series	IP41 or NEMA 3
Standards	EMC Directive	EN 61326-1
Dimensions	SCD.D series	98.0 x 81.5 x 45.5 mm, probe \varnothing 30mm x 120mm
Weight Packed	SCD.D series	292 gr

Transmitter Hardware

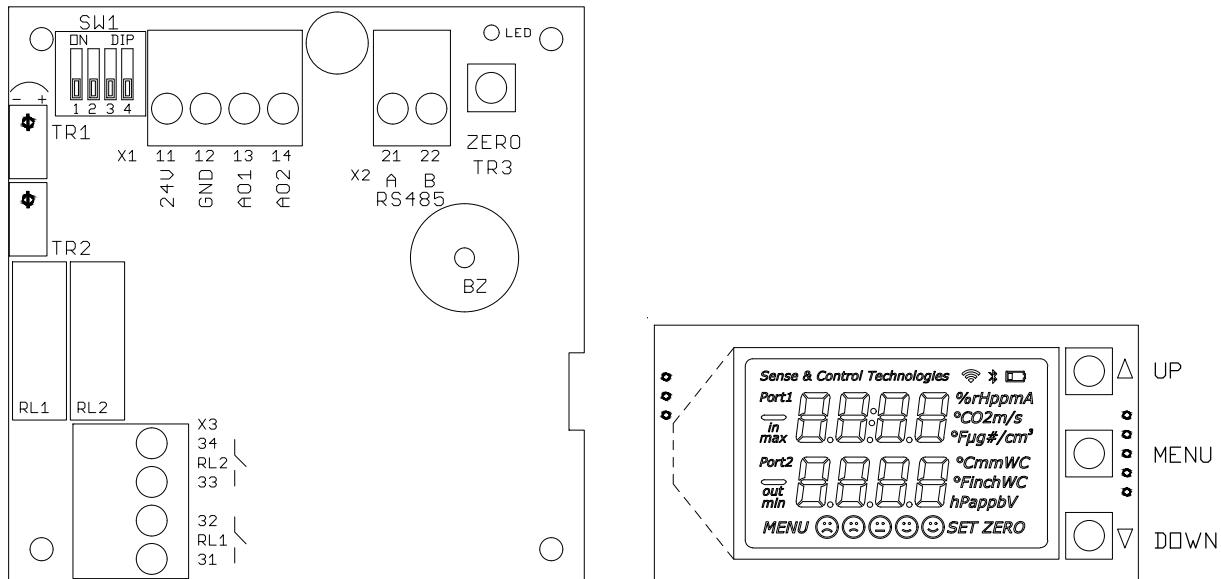

SW1 DIP Switch for configuration range and response time

X1 TERMINAL

11	24V	15...35 Vdc or 24 Vac ($\pm 5\%$, 50-60 Hz)
12	GND	ground for power and reference for outputs
13	AO1	analog output 1
14	AO2	analog output 2

X2 TERMINAL

21	A / RS485	modbus communication positive pair
22	B / RS485	modbus communication negative pair

LED bead LED, periodically lights ON and OFF

modbus communication, blinks when there is a communication

TR1 not used

TR2 not used

ZERO / TR3 not used



RL1 & RL2 relay 1 and relay 2

BZ buzzer

X3 TERMINAL

31	NO - RL1	relay 1 dry contact max. rating 1A @ 220 Vac
32	NO - RL1	relay 1 dry contact max. rating 1A @ 220 Vac
33	NO - RL2	relay 2 dry contact max. rating 1A @ 220 Vac
34	NO - RL2	relay 2 dry contact max. rating 1A @ 220 Vac

Display & Buttons

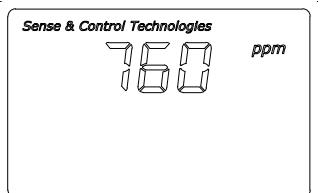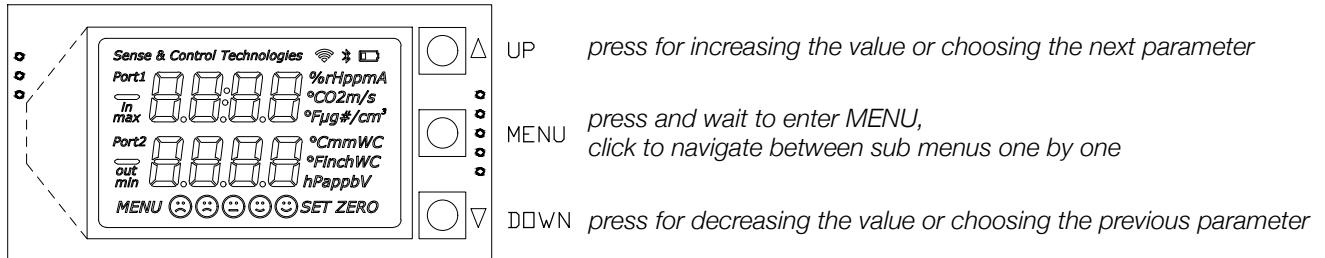


main screen
transmitter is working




keep pressing MENU button until seeing SET
transmitter is not working in MENU mode

Parameters for Relay & Buzzer


Main Screen >>>> r1 L > r1 H > r1 A > r2 L > r2 H > r2 A > BL > BH > BA > Main Screen

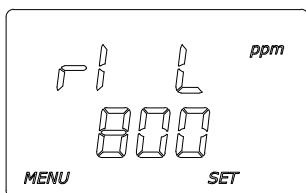


LOW set point for Relay 1

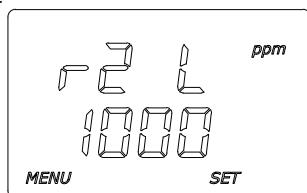


LOW set point for Relay 2

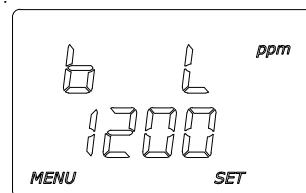


LOW set point for Buzzer

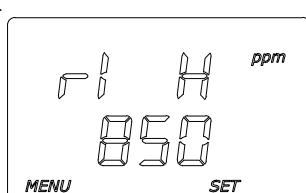


HIGH set point for Relay 1

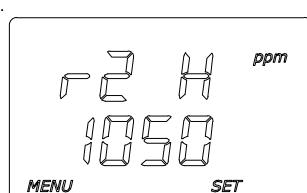


HIGH set point for Relay 2

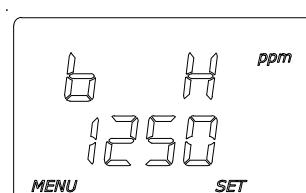


HIGH set point for Buzzer

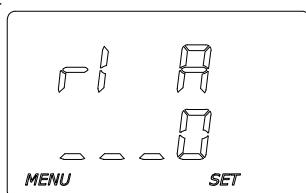

ACTION selection for Relay 1

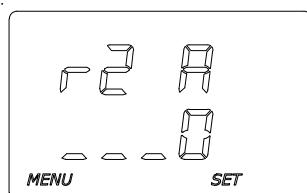

ACTION selection for Relay 2

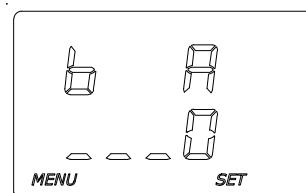


ACTION selection for Buzzer


Actions for Relay & Buzzer




action 0, valid for relays and buzzer,
relay contact is always OPEN
buzzer is always SILENCE




action 1, valid for relays and buzzer,
relay contact is CLOSED between points, OPEN under LOWpoint and OPEN over HIGHpoint
buzzer is WARNING between points, SILENCE under LOWpoint and SILENCE over HIGHpoint



action 2, valid for relays and buzzer,
relay contact is OPEN between points, CLOSED under LOWpoint and OPEN over HIGHpoint
buzzer is SILENCE between points, WARNING under LOWpoint and SILENCE over HIGHpoint




action 3, valid for relays and buzzer,
relay contact is CLOSED over HIGHpoint, OPEN under LOWpoint, hysteresis between points
buzzer is WARNING over HIGHpoint, SILENCE under LOWpoint, hysteresis between points



action 4, valid for relays and buzzer,
relay contact is OPEN over HIGHpoint, CLOSED under LOWpoint, hysteresis between points
buzzer is SILENCE over HIGHpoint, WARNING under LOWpoint, hysteresis between points



action 5, valid only for buzzer,
buzzer is WARNING over HIGHpoint, SILENCE under LOWpoint,
buzzer is WARNING intermittently between points,



action 6, valid only for buzzer,
buzzer is WARNING under LOWpoint, SILENCE over HIGHpoint,
buzzer is WARNING intermittently between points,



action 7, valid only for buzzer,
buzzer is following relay 1 contact,
buzzer is WARNING when relay 1 contact is CLOSED, SILENCE when the contact is OPEN



action 8, valid only for buzzer,
buzzer is following relay 2 contact,
buzzer is WARNING when relay 2 contact is CLOSED, SILENCE when the contact is OPEN

ACTIONS	under LOW	between LOW & HIGH	over HIGH
0 : 0.0.0	Open / Silence	Open / Silence	Open / Silence
1 : 0.I.0	Open / Silence	Closed / Warning	Open / Silence
2 : I.0.I	Closed / Warning	Open / Silence	Closed / Warning
3 : 0.X.I	Open / Silence	Hysteresis	Closed / Warning
4 : I.X.0	Closed / Warning	Hysteresis	Open / Silence
5 : 0.-.I	Silence	Pre Alarm	Warning
6 : I.-.0	Warning	Pre Alarm	Silence
7 : =r1	Silence when RL1 is Open, Warning when RL1 is Closed		
8 : = r2	Silence when RL2 is Open, Warning when RL2 is Closed		

0 : Relay Contact is OPEN, Buzzer is in Silent mode

I : Relay Contact is CLOSED, Buzzer is in Warning mode

X : Relay Contact is at HYSTERESIS position, OPEN if previous position open, CLOSED if previous position closed

 : Buzzer is in HYSTERESIS mode, Silent if previous mode is silent, Warning if previous mode is warning

- : Buzzer is in PRE ALARM mode, Buzzer is warning intermittently

Modbus RS485 Protocol

Default Settings: Modbus ID:1, 9600, 8bit, None, 1. Register Table starts from Base 1.

Use Function 3 for Reading and Function 6 for Writing Holding Registers. Whenever writing to any Modbus Parameter, new parameter is activated instantly and you should have to configure master device according to new parameters. For every reboot/initializing, Modbus is activated with default parameters for 3 seconds. After 3 seconds, Modbus is reconfigured according your parameter settings.

Unlisted registers are for analog output calibrations and some system parameters. Please do not change unlisted registers.

Register	R/W	Range	Description
1	R & W	1...254	Modbus Address
2	R & W	0...4	Baudrate, 0: 9.600, 1: 19.200, 2: 38.400, 3: 57.600, 4: 115.200
3	R & W	0...3	Bit_Parity_Stop, 0: 8bit_None_1, 1: 8bit_None_2, 2: 8bit_Even_1, 3: 8bit_Odd_1
4	R		CO2 level as ppm
5	R		Temperature as C x100, divide by 100 for exact value
6	R	0 or 1	Relay 1, contact position, 0: OFF - Contact is Open, 1: ON - Contact is Closed
7	R	0...1.000	Relay 1, LOW point
8	R	0...1.000	Relay 1, HIGH point
9	R	0...4	Relay 1, ACTION
10	R	0 or 1	Relay 2, contact position, 0: OFF - Contact is Open, 1: ON - Contact is Closed
11	R	0...1.000	Relay 2, LOW point
12	R	0...1.000	Relay 2, HIGH point
13	R	0...4	Relay 2, ACTION
14	R	0 or 1	Buzzer, 0: OK-Silence, 1: PreAlarm - warning intermittently, 2: WARNING continuously
15	R	0...1.000	Buzzer, LOW point
16	R	0...1.000	Buzzer, HIGH point
17	R	0...4	Buzzer, ACTION
18-29	R		Only for service needs
30	R		CO2 level as ppm
31	R		Temperature as C x100, divide by 100 for exact value
32	R		Temperature as C
33	R		Temperature as F x100, divide by 100 for exact value
34	R		Temperature as F
35	R		Humidity as %rH x100, divide by 100 for exact value
36	R		Humidity as %rH

Drawings

